



## Fuel Rail Covers PN 2974, PN 2975


## Car Removal - PN 2950 and PN 2960

Follow these steps to remove both covers. To install the covers reverse the steps.

- 1. Remove the 4 screws holding the covers to the fuel rail and lift the cover to clear rail.
- 2. When the cover is clear of the fuel rail push the cover towards the manifold until it disengauges from the lip of the rail
- 3. Lift the cover straight up.

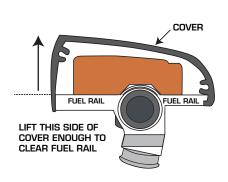

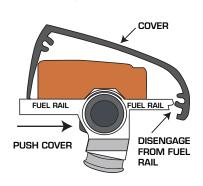

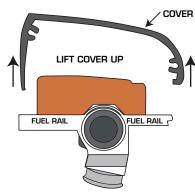

## Truck Installation - PN 2957 and PN 2958

Follow these steps to install both covers. To remove the covers reverse the steps.



- 1. Set the fuel rail cover on the fuel rail and line the end of the fuel rail cover up with the edge of the black mold on the rear of the fuel rail .
- 2. Slide the cover towards the rear of the engine to engage the locking tabs on the fuel rail.
- 3. Install the 8/32 screws that secure the covers to the fuel rails.
- 4. Install the end caps and secure with the 6/32 screws.

## SLIDE TOWARD REAR TO ENGAGE.

